

General Information

Key code table

INPUT	FACTORY-SET KEYCODE	
	Normal	Shift (hold 1 player start)
1 right	R arrow	Tab
1 left	L arrow	Enter
1 up	U arrow	Tilde(adj volume, gamma, etc)
1 down	D arrow	P (pause)
1 B1	L-ctrl	5 (Coin A)
1 B2	L-alt	
1 B3	space	
1 B4	L-shift	
1 B5	Z	
1 B6	X	
1 B7	C	
1 B8	V	
Start 1	1	
Start 2	2	Esc
2 Right	G	
2 Left	D	
2 Up	R	
2 Down	F	
2 B1	A	
2 B2	S	
2 B3	Q	
2 B4	W	

2 B5	I	
2 B6	K	
2 B7	J	
2 B8	L	
Coin 1	5	
Coin 2	6	

J-PAC JAMMA Edge connector pinout.

Connections in RED are used by J-PAC. Others are not connected.

SOLDER SIDE			COMPONENT SIDE	
GND	A	1	GND	
GND	B	2	GND	
+5V	C	3	+5V	
+5V	D	4	+5V	
-5V	E	5	-5V	
+12V	F	6	+12V	
Key	H	7	Key	
Coin counter 2	J	8	Coin counter 1	
Coin lockout	K	9	Coin lockout	
speaker (-)	L	10	speaker (+)	
NC	M	11	NC	
green	N	12	red	
composite sync	P	13	blue	
Service switch	R	14	Video ground	
Tilt	S	15	Test	
Coin 2	T	16	Coin 1	
Player 2 Start	U	17	Player 1 Start	
Player 2 Up	V	18	Player 1 Up	
Player 2 Down	W	19	Player 1 Down	
Player 2 Left	X	20	Player 1 Left	
Player 2 Right	Y	21	Player 1 Right	

Player 2 Button 1	Z	22	Player 1 Button 1
Player 2 Button 2	a	23	Player 1 Button 2
Player 2 Button 3	b	24	Player 1 Button 3
Player 2 Button 4 (non-std)	c	25	Player 1 Button 4 (non-std)
	d	26	
GND	e	27	GND
GND	f	28	GND

All the inputs which appear on a standard JAMMA interface are routed to the JAMMA edge connector. The inputs which appear on the I-PAC but not on a JAMMA connector are routed to screw terminals. If it is required to connect extra non-JAMMA controls, follow the wiring instructions below.

The exception to the above is button 4 (both players). This appears on some non-standard JAMMA cabinet connectors and is therefore routed to screw terminals and the JAMMA edge connector.

The J-PAC programming utilities are identical to I-PAC and can be downloaded from [here](#).

The I-PAC LED harness is compatible with the 10-pin header on the J-PAC. Also the Opti-PAC power connector is compatible.

The [I-PAC programming instructions](#) apply to the J-PAC. Programming is optional, the board come pre-configured with MAME keycodes.

Configuring the Monitor Interface:

The monitor interface performs the following functions:

- Routes all required signals from the PC VGA port to the JAMMA edge connector.
- Determines if the frequency being output from the PC is within the range for the arcade monitor. Only enables the arcade monitor sync if within safe range.
- Indicates sync status by means of LEDs.
- Converts VGA horizontal/vertical sync to composite sync.
- Automatically caters for positive and negative frame sync and converts if necessary. NOTE: It does not convert positive horizontal sync. See later.
- Can be set to divide line frequency by two so as to display a stable VGA picture on an arcade monitor for test purposes. (actually displays two pictures side by side)

To configure the monitor interface, install one jumper on the pair of pins indicating the frequency

your monitor is specified to operate at. Most older arcade monitors operate at 15 Khz. Alternatively, if a 15Khz monitor is being used, install jumpers on both the 15 and 31Khz positions (default setting). This enables a stable picture to be displayed during boot. See below.

IMPORTANT: The J-PAC does not convert or process the video signal in any way except amplify it to the level required by an arcade monitor. The sync frequency jumpers only control the sync-in-range safety check. The PC must be configured to send the correct sync frequency for the monitor unless our ArcadeVGA card is being used.

When the SYNC OK LED is off, this indicates that no sync signal is being sent to the monitor because it is out of the correct range for the monitor. The effect this has on the monitor varies with different monitor types. Some monitors have an in-built line timebase which will free-run at its natural frequency, hence a jumbled picture will be displayed. This will NOT cause any damage as the monitor is not being driven outside its range. If a 15Khz monitor is being used and both the 15 and 31 jumpers are on, the J-PAC will generate it's own "dummy" 15Khz sync signal if it is not receiving any sync from the PC (for example if the PC is re-booted).

Other makes of monitor do not have a free-running timebase and will therefore blank the screen if there is no sync signal.

If you wish to see a stable VGA picture during boot, set for "split screen mode". install a jumper on both the 15 Khz and 31 Khz positions. In this mode when the PC is booted, a visible double picture should be displayed. When the VGA frequency drops to 15 Khz the picture will return to normal. This mode is for 15 Khz monitors only. The picture may not be stable all the way from initial power-on. See description below.

The quality of this picture varies with monitor type and VGA card. Some monitors may display this clearer than others and it is only intended for checking that the PC and monitor is functioning, not as a usable picture. It may be necessary to adjust the monitor controls to a setting which is OK for both normal and test mode. It is usually possible to use this picture for DOS editing of configuration files etc.

The following describes the sequence of events during PC boot. It assumes ArcadeOS is installed and in the autoexec.bat file so starts on boot. It assumes jumpers on both 15 and 31Khz positions:

First Boot Screen: This is the screen which displays BIOS details etc. The display will vary with monitor type and VGA card type. Some VGA cards output positive horizontal sync on this screen and a rather fuzzy picture may be produced. If using our ArcadeVGA card, this step and all later steps will display a perfect screen.

Second boot screen (DOS boot): Every VGA card tested so far outputs negative horizontal sync on this screen and the SYNC OK LED lights. A stable double picture should be displayed. You

should be able to see DOS booting up on the arcade monitor with two pictures side-by-side. If the picture is rolling, adjust the vertical hold control for stability.

ArcadeOS starts: The J-PAC will stop dividing the sync and display a proper game picture on the arcade monitor providing ArcadeOS is configured correctly ("incabinet = 1" in the ArcadeOS.cfg file)

MAME Game started: The game screen should be displayed. If the monitor loses sync, it may require re-adjustment. It should be possible to find a setting of the monitor vertical sync which is within range of the boot screen (which is often 70Hz) and ArcadeOS (which is 60Hz). Some games (for example Space Invaders) when run at their default resolutions, output a 50Hz sync rate. This will probably not be within range without re-adjusting the vertical hold and losing sync on the other screens. The best way around this is to specify a resolution for this game, for example 320 X 240. This should output 60Hz. This narrows the range the monitor is being asked to deal with. Most monitors should be able to handle 60Hz -70Hz without adjustment but few will handle 50Hz -70Hz.

Sound:

The J-PAC does not contain any active sound circuitry owing to the JAMMA standard not providing good sound capabilities (one speaker only), nor any powerful enough voltage supply being readily available.

The JAMMA standard is mono sound. The JAMMA edge connector speaker wires are routed to screw connectors on the J-PAC.

These connections can be used to connect a powered PC sound card to the cabinet speaker.

Alternatively for better quality stereo sound, simply use a normal pair of PC speakers, either powered or passive, and place inside the cabinet or wire to the cabinet speaker(s).

JAMMA Cabinet Preparation:

It is usually preferable to remove any low-voltage game board power supply which is fitted inside a JAMMA cabinet, leaving only the monitor powered from AC mains (via the cabinet isolating transformer if fitted). With no game logic board to provide a load, most cabinet power supplies would not work anyway. Also keeping 12 volts away from the J-PAC will eliminate the risk of damage in the event that the JAMMA connector is ever plugged in backwards. Another alternative is to unplug the AC feed to the game board power supply. Ensure that doing this does not also disconnect the ground!

IMPORTANT: If a cabinet power supply IS still operating, make doubly sure the JAMMA

connector is plugged on the correct way round otherwise the J-PAC will be damaged as 12 volts would be applied to the inputs.

Most older arcade monitors require an isolating transformer. **DO NOT REMOVE THIS** if fitted otherwise the cabinet and monitor frame will be directly connected to the mains power supply!

Double check the monitor frame and the control panel are directly connected to ground. If the ground is poor, a voltage could build up on the cabinet connections which is not only dangerous but will destroy the J-PAC. Be especially careful if you have removed the power supply as this may result in breaking the grounding of the monitor which could have been routed through the power supply.

Ensure that if the cabinet has an electronic coin door, this sends a 5 volt signal, not a 12 volt, otherwise the J-PAC will be damaged.

Connecting to the JAMMA harness and PC.

Configure the PC to run the VGA card at the correct frequency for the arcade monitor. This will require special software and/or drivers unless you are using an ArcadeVGA card. These drivers will be invoked during the PC boot process or start-up of an emulation front-end or emulator itself. There will therefore be a period of time at start-up when the PC will not be providing the correct output for the arcade monitor. The special circuitry on the J-PAC will ensure the monitor does not attempt to operate outside its range.

Check grounding of the cabinet before proceeding to avoid any danger/damage. The best method of doing this is as follows:

Using an ohmmeter or continuity tester check for a good connection between the following points:

Monitor frame

JAMMA edge connector ground pins. These are the 4 pins at either end of the connector.

Mains power cord ground.

Control panel ground.

Power supply ground if fitted.

Now connect the JAMMA connector. Double check it is the correct way round, especially if it is not fitted with a key. Connect the keyboard interface cable from the DIN connector marked "PC KB/USB" to the PC keyboard port or USB port. Connect the video cable from the connector

marked "PC VGA" to the VGA card. Connect a pass-through keyboard to the connector marked "KBD" (optional).


If you are using the LED harness, plug it onto the 10 pin header. Note that one pin of the header is missing. This is to ensure the polarised plug can only be inserted the correct way round.


CONNECTING ADDITIONAL NON-JAMMA CONTROLS (eg buttons 5-6)

Connect one side of each switch to the screw terminals as indicated on PCB. "Daisy chain" the other side of all switches together and connect to either of the "GND" terminals on PCB. Some micro-switches have 3 connections – only use the ones marked "NO" and "COM". Don't connect anything to the "NC" tag. Below is a diagram showing an example of 3 joystick micro-switches connected to inputs on the J-PAC board.

The gauge of wire used is not critical. Any insulated stranded wire will do providing it is thick enough to be gripped by the screw connectors. The wire we supply in our wiring kit is 16 X 0.2 mm.

You can connect more than one switch to one J-PAC input, to perform the same function. For example you might want to have side flipper buttons connected to the same inputs as fire buttons as these are used in different games. This applies to joysticks too. You can connect a 4 and an 8-way stick to the same inputs. (But check our 4-8 way switchable sticks though!)

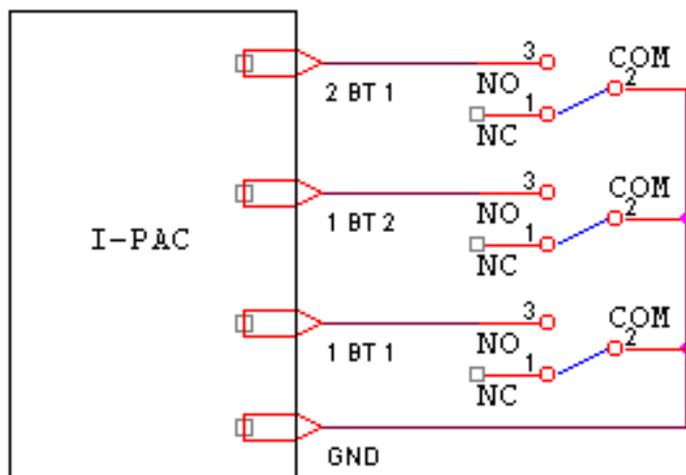

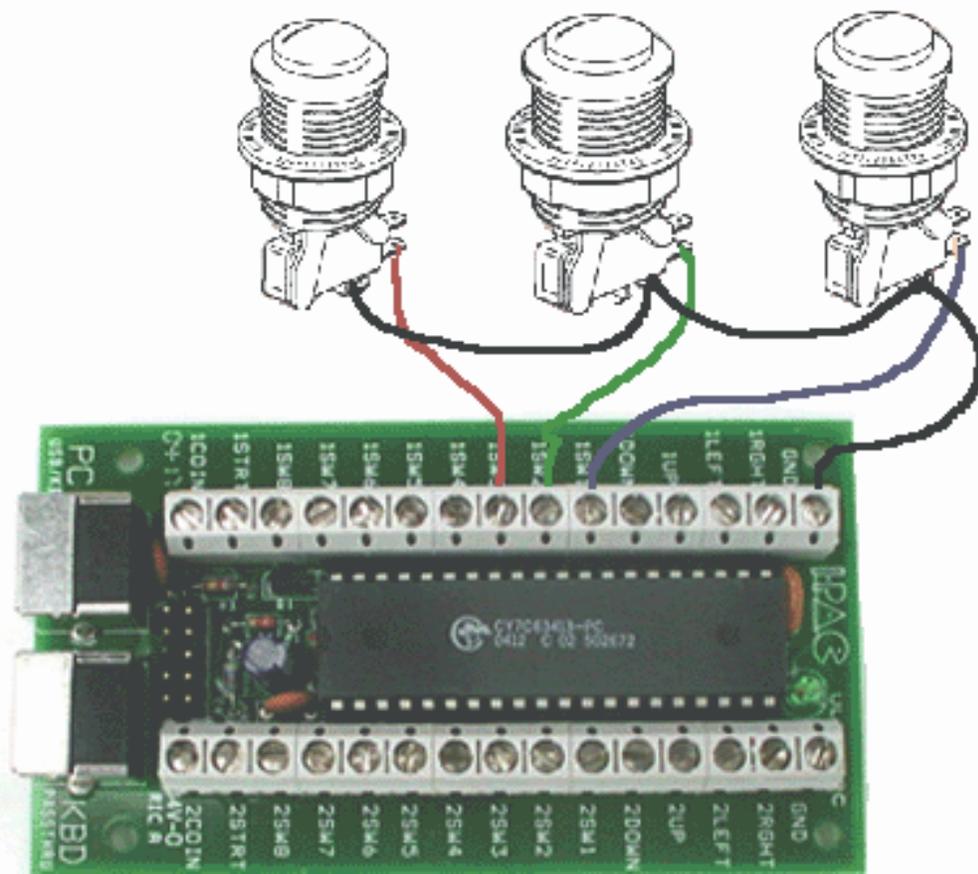

Power on the PC. The "SYNC IN" LED should light indicating the J-PAC is receiving a sync signal from the PC. The "SYNC OK" LED will light when the PC has switched into the correct video mode for the monitor, and then the monitor should display a picture. The Self test LED flashes and then should light continuously.

CONTROL CONFIGURATION AND TESTING.

The board automatically detects which interface it is connected to (USB or PS/2).

You do not need to install any drivers or software from the Ultimarc CD to get the board to operate. There are no third-party drivers for the J-PAC.

When the board is first powered on, it contains a pre-loaded code set. This matches the MAME default key codes as the table above indicates. For many people there is no need to do any re-assignment, just power up and play.

You may want to re-program the codes if any of the following apply:

- You use an emulator or other PC application without a key re-mapper. (the "ctrl" and "space" keys used for buttons in MAME perform control functions in Callus for example so these keys

have to be re-assigned)

- You don't want people to be able to access the MAME game config menus by using shift buttons (for example game contests etc)
- You want to limit coin insert to a real coin slot rather than using shift button feature.

If using USB: Start windows. With Windows running plug in the USB cable. Windows will detect the device and automatically load drivers. The drivers for this device are on the Windows CD ROM and are part of Windows. There are no Ultimarc drivers needed.

BASIC TESTING.

Boot PC into DOS or Windows and run a text program such as Notepad. Observe the self-test LED on the J-PAC which should display a flash pattern and then light continuously. Press various player 2 buttons (some of the player 1 buttons are mapped to non-displayable codes such as ALT so best to use player 2). You should see characters displayed, just as if they were typed on the keyboard.

ADVANCED TESTING (optional)

If in DOS, enter COPY CON to suppress the command prompt. On a keyboard plugged into the pass-through, press CTRL-ALT-P. (press and hold each key in this order). Enter "T" in the menu to enter test mode. All pressed buttons and joysticks will be displayed on the screen. The input will be shown, followed by the code which is currently assigned, followed by the shifted code, if one is assigned. Test all buttons and joystick switches. If all OK reboot to exit. Now ready to play!

PROGRAMMING (optional)

There are two methods of programming the board. The WinIPAC IPD utility can be downloaded and run from Windows or IPACUTIL in DOS See [programming instructions](#) for details, OR you can enter the Interactive Programming and Test Mode by pressing CTRL-ALT-P on a keyboard connected to the pass through. See [here](#) for instructions. You might also have to do some setting-up in MAME because buttons 5 and 6 are not normally assigned by default in MAME and must be programmed. (press tab in any game).

SHIFT MODE

Pressing and holding *1player start* enables shift mode with access to the following keys (when "MAME" setting is used):

2 player start=Esc – for jumping back to the menu

Joystick left=Enter – for running games in Windows and for MAME game config menu

Joystick right=Tab – for entering MAME config menu

Joystick up=~ - for entering MAME volume/gamma menu

Joystick down=P MAME pause key

1 fire (button 1)=5 – for simulating coin insert.

The above shift keys can be changed/turned off as required if the board is programmed.

MAME HINT: to get past "Type OK to continue" prompt, just move joystick left then right.

NOTES: PC should pass BIOS keyboard self-test with or without a normal keyboard connected. The unit is capable of being used in a closed arcade cabinet with no additional keyboard or controls and motherboard booting into an emulation menu. If an auxiliary keyboard is connected it can be used fully and even used during gameplay alongside your control panel.

USB NOTES: In USB mode the keyboard pass-thru connector does still work, and the J-PAC translates the PS/2 keyboard protocol into USB. This is primarily for using [interactive programming and test mode](#). It is recommended that, with J-PAC in USB mode, you normally connect your PS/2 or USB keyboard directly to the PC.

USB DOS SUPPORT: Most PCs support a USB keyboard in DOS mode so J-PAC in USB mode MAY work in DOS. (USB keyboard support may have to be enabled in the BIOS). HOWEVER: many BIOSes have poor USB support which prevent use for gaming, as the response is too slow. USB is intended for Windows use, either in a "DOS box" or a windows application.

USING A J-PAC and I-PAC TOGETHER: This combination can be used for 4-player cabinets. The second board can be connected to the pass-thru connector of the first. Or either connect both boards to USB or the first to the keyboard port and second to USB. Each board can be individually programmed with the required code set, then the two boards can be connected together as above.

LEDs: The three LEDs use the following inputs, which become bidirectional:

Player 1 Button 7

Player 2 button 7

Player 1 button 8

These inputs can still be used for buttons even if LEDs are connected but note that when the buttons are pressed the LEDs will light. You can wire your own LEDs to these connections.

LED HARNESS: (Optional). The LED harness plugs onto the 10-way header on the board. The LEDs are connected to the harness via a removeable plug. This can be disconnected to allow the LEDs to be mounted through a panel. Ensure to note which way round the plug is fitted to the LED. The LEDs can be tested by pressing caps lock, scroll lock and num lock on a pass-thru keyboard.


IMPORTANT NOTE!

The LED harness and the PCB take 5 volts from the PC motherboard. Ensure no exposed parts of either touch to ground. If this occurs the motherboard could be damaged. Most motherboards supply the 5 volts to the keyboard connector via a tiny wired-in fuse which looks like a resistor. If the 5 volts is shorted this fuse will need to be replaced which is not easy!

Mount the PCB on a wooden control panel or other insulator, or if this cannot be done, use stand-off pillars. When the LEDs are connected to the harness a small length of pin is left exposed. This can be bent over to secure the plug and should be insulated with tape as one pin on each LED is connected directly to 5 volts.

HEADER PLUG AND LED WIRING DIAGRAM:

The diagram below will help if you decide to make your own LED connections. The header plug pins are shown looking from the top.

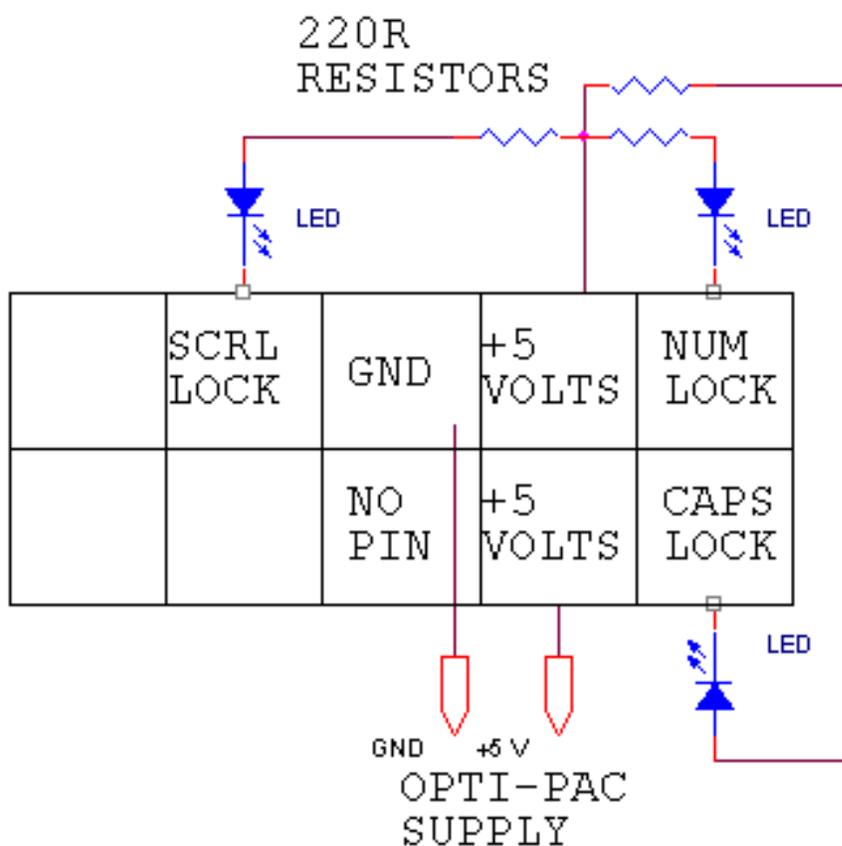

TROUBLESHOOTING Control Problems

General Approach:

The on-board self-test LED gives a display of functional checks, see later in this section for more details.

Remember that the J-PAC emulates a keyboard. So if you bear this in mind, you can use any program that displays text to test the response with certain limitations. Notepad or the DOS prompt can be used for example. You can connect a short piece of wire to GND and use the other end to touch onto various input connections, and characters should be typed on the screen. Bear in mind, though, that the default MAME configuration includes many non-printing keys such as ALT, CTRL and the arrow keys, so trying the player 2 inputs is best as these are all printable characters.

But Notepad or DOS cannot tell you whether an input is "stuck" though so is not a complete test.

For this you need to use the [I-PAC test mode](#) or [Ghostkey.exe](#). (A DOS program). For

Windows, the best test by far is the [Passmark keyboard Test](#) which I can recommend downloading. It's a 30-day trial version but hopefully you will have it working by then!

Problem: Player 2 buttons 5 and 6 not working.

This is not an J-PAC problem! By default, MAME does not have these buttons assigned to any keycodes. Just go into the MAME controls menu (press tab in a game) and assign them. Button 5 is "I" and Button 6 is "K".

Problem: No shift functions work.

Part of the shift function design means that to avoid "stuck" keys, shift functions are disabled when any key is pressed. So loss of shift functions means you have a shorted or stuck switch. Problem is, which one? There are two ways to determine this. The on-board LED gives an indication of which input is shorted, see later in this section.

Or use the built-in test mode:

Run any text-display program such as Notepad, or if you are in DOS type "COPY CON" to turn off the command prompt. With a keyboard plugged into the pass-through port, press CTRL-ALT-P (press and hold each key in this order). You will go into programming mode. If the MAME/ALT jumper is set to MAME you will go right into test mode. If not, you will see a menu. Enter "T" for test mode. The offending stuck input(s) will be displayed on the screen.

Problem: Cannot program. Utility hangs at end of programming.

One cause of this is having non-switch items connected to inputs. In general, the inputs must be "open" (ie no switch pressed) for programming to work. This may not be the case if you have other things connected such as a game board connected at the same time as the J-PAC. Email for further advice on this if you must have other devices connected as there are workarounds.

Problem: Erratic behaviour of joystick directions. Shift functions not working. "Stuck" keys.

A very common cause is connection of the inputs to the "NC" contact on the switches instead of "NO". Note this is especially easily done with the T-Stik. On this stick the two outer tags on the switches are used, not the centre tag. See the "no shift functions work" heading above for more info. This type of problem usually occurs when a large number of switches are incorrectly

connected. The self-test LED will indicate this problem.

Problem: Slow response and stuck keys in Windows 98 when using J-PAC in USB mode. This is caused by the motherboard USB controller not working in Windows. The keyboard (and therefore I-PAC) is relying on the slow BIOS for support instead of the Windows USB controller drivers. Go into the BIOS setup and disable USB keyboard support or "legacy port 60-64 support". If the I-PAC stops working completely then this is the problem. Now go into device manager in Windows and check the USB controller for any driver problem.

Problem: In USB mode, the J-PAC was not detected properly once before and now I can't get it out of this state.

You will need to remove it from Windows and let it re-detect. Go into Control Panel, System, Device Manager, Hardware. Open up the USB controller by clicking on the plus sign next to it. Under this heading will be displayed all the USB devices. Right click on all devices one by one except the controller itself and Root Hubs and select "uninstall". Now unplug and re-plug the I-PAC. It should be re-detected.

Problem: In USB mode, it is only detected as "Unknown Device" or "device has a problem". Under certain conditions, shorted inputs can cause this, or inputs that are held at 5 volts. This may happen either because of a wiring error (see steps for checking this, above) or the I-PAC inputs being connected to something other than an open-circuit switch. If you need to connect non-switch devices please email for advice.

Problem: MAME32: Intermittently sticking in one direction. Several people have reported this, and it's not a J-PAC problem. If you check the J-PAC installation using the [Passmark Keyboard Test](#) you will probably find that this works fine. This seems to be a MAME32 issue affecting keyboards, not just the J-PAC. Two things to try: Upgrade to the latest Direct-X version and also ensure "Use Joystick" is disabled (this refers to a PC Game-port device). If you find that either of these fixes this problem please email me.

Troubleshooting using the J-PAC Self-Test LED (Later boards only)

The self-test LED indicates status and errors by using flash patterns.

This is the sequence of events on power-up:

Power applied: One short flash

Then

PS/2 Interface detected: a second short flash and then if switch test passed: LED stays lit

Or

USB Interface detected

Then

USB Interface initialized by PC and switch test passed: LED stays lit

Or

If inputs test fails: LED flashes a number of times to indicate which switch is shorted or faulty. LED then stays off. This does not necessarily mean the board will not work, but indicates a switch wiring or other problem which should be investigated. Check the table below for the failing input. Check switch wiring. Try disconnecting this wire and see if the flash pattern changes.

Error Conditions:

LED never lights:

Board faulty, cable faulty, PC not powering up correctly.

LED gives two short flashes and the I-PAC is connected via USB:

The board has mis-detected a PS/2 interface. Check USB controller is enabled and working on the PC. Try another USB device as a test.

LED gives one short flash then stays off:

I-PAC has detected a USB controller but the PC is not detecting the device as having been connected. Check USB drivers on PC.

LED flashes 3 or more times after initially lighting:

Switch test failed. Check chart below for failing input. Check switch wiring. Try disconnecting this wire and see if the flash pattern changes.

LED lights as soon as power is applied, never flashes but just stays on constantly:

See the first line of the table below

Switch test failure codes.

Count the number of flashes after the first time the LED lights

The table shows the input which needs to be investigated. Check for incorrectly-wired switches.

Try disconnecting this switch. The test might now pass. If more than one input is failing, the pattern may change, indicating a second failing input.

Number of Flashes	I-PAC VE	I-PAC 2	J-PAC	I-PAC 4 player 1-2	I-PAC 4 player 3-4
Stays on constantly	1 D	1 sw 6	1 sw 6		
3	1 right	2 up	1 up		
4	2 right	2 right	coin 1		
5	1 left	2 sw 1	2 up	coin 1	coin 3
6	2 left	2 left	coin 2	2 right	4 right
7	1 up	2 sw 3	1 down	coin 2	coin 4
8	2 up	2 down	start1	2 left	4 left

9	1 down	2 sw 5	2 down	start1	start3
10	2 down	2 sw 2	start 2	2 up	4 up
11	1 sw 1	1 right	1 left	start 2	start 4
12	2 sw 1	2 sw 4	2 sw 8	2 down	4 down
13	1 sw 2	1 left	2 left	1 right	3 right
14	2 sw 2	start1	2 sw 6	2 sw 1	4 sw 1
15	1 sw 3	1 up	1 right	1 left	3 left
16	2 sw 3				
17	1 sw 4	1 down	2 right	1 up	3 up
18	2 sw 4				
19	1 sw 5	1 sw 1	1 sw 1	1 down	3 down
20	2 sw 5	coin 2	2 sw 5	2 sw 2	4 sw 2
21	1 sw 6	1 sw 2	2 sw 1	1 sw 1	3 sw 1
22	2 sw 6	coin 1	2 sw 4	2 sw 3	4 sw 3
23	start1	1 sw 3	1 sw 2	1 sw 2	3 sw 2
24	start2	start 2	1 sw 5	2 sw 4	4 sw 4
25	coin 1	1 sw 4	2 sw 2	1 sw 3	3 sw 3
26	coin 2	1 sw 8	1 sw 6	2 sw 5	4 sw 5
27	1D	1 sw 5	1 sw 3	1 sw 4	3 sw 4
28	2D	2 sw 7	1 sw 7	2 sw 6	4 sw 6
29	1C	1 sw 6	2 sw 3	1 sw 5	3 sw 5
30	2C	2 sw 8	1 sw 8	2 sw 7	4 sw 7
31	1B	1 sw 7	2 sw 7	1 sw 6	3 sw 6
32	2B			2 sw 8	4 sw 8
33	1A			1 sw 7	3 sw 7
34	2A	2 sw 6	1 sw 4	1 sw 8	3 sw 8

Video Problems.

Almost all video related problems are related to the lack of 15Khz arcade monitor support of most video cards. The J-PAC cannot do any video processing (other than amplification) so any strange pictures are not directly attributable to the J-PAC. Incompatible cards can cause all kinds of strange lines, many duplicate pictures across the screen, etc. (don't confuse this with the J-PAC test "scan divide" mode which occurs when the J-PAC is dividing a VGA picture in half to get a stable 15Khz display during boot-up. This is enabled when the 31 and 15 Khz jumpers are both

on, and the PC is sending a 31Khz signal).

Here are some relevant facts which may explain weird screens:

Versions of MAME of 0.53 and later removed support for 8-bit palette modes. (No-one knows why!)

ArcadeOS is a great front end but has not been updated for a while so assumes MAME still supports 8-bit modes.

Many video cards only support 15Khz in 8-bit modes, therefore will only work in old versions of MAME!

Branded video cards such as Compaq which use "known good" chipsets such as ATI generally don't work as they behave differently from the "real" cards. Same for on-board video chips.

Windows is pretty tricky on an arcade monitor. See <http://www.mameworld.net/suzuki2go/vsyncmame> for some info about Windows with an arcade monitor. The VsyncMAME driver can be used with a number of cards including the Trident Blade 3D. See this message board posting also:

<http://www.ultimarc.com/messages/9.html> (thanks Oscar!).

Constant "split screen" (one vertical split down the middle with 2 pictures, one each side). This means you have not configured MAME or ArcadeOS for 15Khz and the PC is still sending a normal VGA signal. The J-PAC is operating in "scan divide" mode. To verify this is happening, try running with only the 15Khz jumper on. This will disable the J-PAC "scan divide" mode and the green LED will go out, indicating that the sync is out of range.

The line "INCABINET = 1" should be present in the ArcadeOS.CFG file and/or "Monitor Arcade" in MAME.CFG.

Any other strange screens (ie not a vertically split screen) are probably down to incompatibility, see above.

No vertical Sync: No power to J-PAC. ensure the keyboard cable is connected to the PC.

Picture too small: This is a very common problem. If you are using ArcadeOS, try going into the game configuration menu and try every possible resolution. You may find a satisfactory one. Try setting 640X480 to "off" in MAME.CFG. There are a number of other settings in ArcadeOS and MAME which may improve things. If you find a good setting please post on the message board! If you cannot overcome the small-picture problem, you may need Advanced MAME. This has configurable settings for all resolutions and an interactive utility for re-sizing the picture. In fact the ADVV.EXE utility is a good tool even in it's own right for checking screen performance at different resolutions.

